Changing Camera Names

This guide will assist you with changing the name of the camera in the Live View Display.

First you will need to access the main menu by right clicking anywhere on the screen. Left click on Main Menu and enter your password. Then click on Camera under settings.



In the camera settings click on Camera Name on the left .You will see a list of all the camera channels with their default names. Click in the text box next to the camera you want to modify and type with the on screen keyboard.

CAME	RA		🔜 🍪 🚍	🕨 🎝 🎝	2 ₀	LIVE	🚨 🕀 - 🛤
Camera Lis		CANAL	Incl	400 14 2	Channel2		
Image	Image	CAMI			Channel2		
Overlay		CAM 3	Channel3	CAM 4	Channel4		
		CAM 5	Channel5	CAM 6	Channel6		
Encode	►	CAM 7	Channel7	CAM 8	Channel8		
Camera Na	ame	CAM 9	Channel9	CAM 10	Channel10		
PTZ		CAM 11	Channel11	CAM 12	Channel12		
		CAM 13	Channel13	CAM 14	Channel14		
		CAM 15	Channel15	CAM 16	Channel16		
전기지 않는 것							
w=-1-116							
				< 1/2			
		Defaul	t Refresh			Apply	Cancel

For this example we will name the Channel TEST and then click the apply button on the bottom right.

	CAMERA		— 🚱 🚍	* • •	J <u>₽</u> ⇔	LIVE	2 B - 53
	Camera List Image Overlay	CAM 1	TEST	CAM 2	Channel2		
		САМ З	Channel3	CAM 4	Channel4		
16	Encode	CAM 5	Channel5	CAM 6	Channel6		
>	Camera Name	CAM 7	Channel9	CAM 8 CAM 10	Channel10		
	РТΖ	CAM 11	Channel11	CAM 12	Channel12		
		CAM 13	Channel13	CAM 14	Channel14		
		CAM 15	Channel15	CAM 16	Channel16		
-							
				< 1/2			
		Defaul	t Refresh			Apply	Cancel

You should now see the updated channel name on the Live View screen for that camera.



Any other questions or concerns please feel free to contact us at support@cctvsecuritypros.com