## Surevision Audio Setup

## Please make sure your firmware is on the latest version before proceeding.

You can update your firmware by following the instructions on this page.

How to Upgrade Your Firmware (Surevision)

To Enable Audio on your Surevision System you will need to go to **Menu > Camera > Audio** then make sure Audio Input is Selected for the camera and hit Apply.

	Camera	
لنت		Select Camera 011/IP Camera 011
Camera	Encoding	Audio Tonit
$\bigcirc$	Audio	votio input
VCA		Access Made Line/Mic ~
	Snapshot	Input Volume
	OSD	Audio Compression G.711U ~
Network		Sampling Rate(KHz) 8KHz ~
<b>{</b> ⊙} System	Image	Noise Suppression
	Privacy Mask	Audio Channel 1 LINE ~
5		Audio Output VINE ~
Backup		Output Volume
$\square$		
Storage		
$\triangle$		
Maintenance		

Once enabled if looking to record the audio for playback purposes you will need to go **to Storage > Recording > Schedule** and enable the Audio Storage Option. This will allow the camera you selected to record audio to the Disk.

