

Unpacking Camera package w/ Premade Cable:

1. CCTV Camera
2. Male Pigtail
3. Premade Cable
4. Power Box



Cable Run:


Camera Side
Male Power Plug



DVR Side
Female Power plug



Power Box:

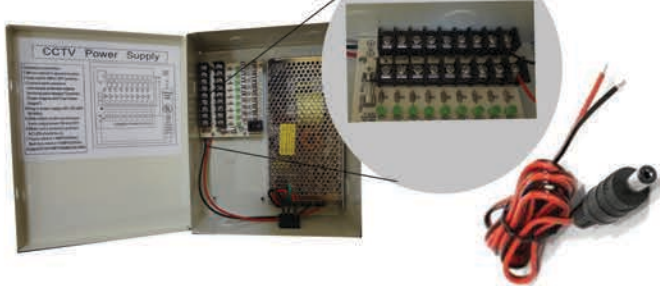

*Please make sure that the male pigtail is connected with RED side to POSITIVE (+) and BLACK side to NEGATIVE (-). To ensure proper connection, wrap copper wire around screw and tighten.

DVR Connection:




*Please make sure the BNC is connected to the "VIDEO" Input on the DVR

Unpacking Camera package w/ Spool of Cable:

1. CCTV Camera
2. Male Pigtail
3. Cable Roll
4. Power Box
5. Male BNC Connector




Making the Termination:

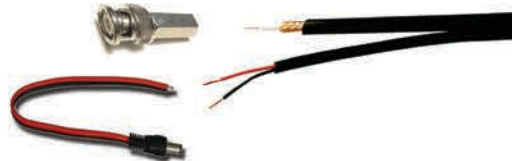


1. Strip the RG59 video wire
2. Strip the power wire
3. Twist the BNC connector onto the RG59
*Please make sure the copper shield does not touch the center copper pin
4. Secure the male pigtail to the power wire
*Please make sure the RED is on RED (+) and BLACK is on BLACK(-)

Power Box:

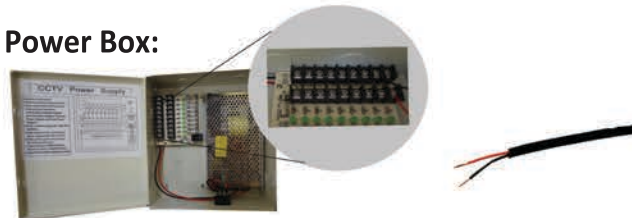

*Please make sure RED is to POSITIVE (+) and BLACK is to NEGATIVE (-)

 DVR Connection:



*Please make sure the BNC is connected to the "VIDEO" Input on the DVR

Premade Cable package with Audio:



Spool Cable package with Audio:



*You must run 2 sets of cable to allow for audio if you are using the spool of cable

Basic Troubleshooting:

1. No Video
 - a. Check the power cable to the power box or wall outlet
 - b. Make sure power switch is in the "ON" position & make sure all of the fuses are illuminated
 - c. Make sure the POSITIVE(+) and NEGATIVE(-) are in correct position
 - d. If using cable spool, make sure the outer copper wire is not touching the center pin
 - f. Make sure that the BNC is connected to the "VIDEO" port on the DVR
2. No Audio
 - a. Check audio connection on the DVR
 - b. Enable the MIC in the DVR menu
 - c. Make sure cable does not run across high voltage