
 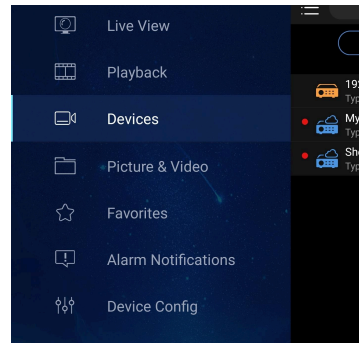



Sharing Remote Access with other users

Most users will want the ability to share their remote access with multiple people. Each user will need to download the SureVision app found in the App Store or Play Store and register an account inside of the app. Please follow the SureVision App setup for help in creating a new account. In order for your new user to access your SureVision system you will need to generate a sharing QR code for the new user to scan.

Start by opening your SureVision Application and clicking the three lines in the top left and select **Devices**.




Select the "**3 Dots**" icon highlighted in red next to the device you wish to share.

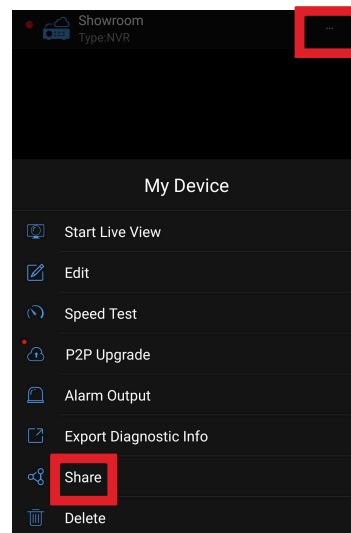

Select **Share** and select the NVR's name at the top of the next page.

Select **QR Code** at the top and enter a **password** for the new user. You will need to share this password with your new user so please be sure to remember this one! Enter the **Valid Period**, this is how long your user will have access to the system for. You may grant temporary access or adjust the time for years worth of access. Last, enter the **permission**. Will this user be an Administrator or a user with limited access? Once complete click **Generate** at the bottom.

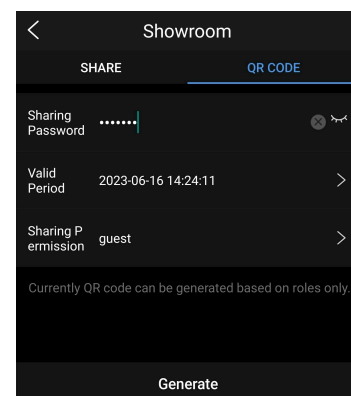

Your new user will need to add a device on their phone or tablet using this QR code.

