

CONVERTING FILES DOWNLOADED FROM THE DVR TO AVI (PC)

You will need:

- Files downloaded from the DVR in .dav format
- The General Player (available from the cd-rom that shipped with your DVR or([here](#)))

STEP 1

Open The General Player By double-clicking its icon:




STEP 2

Click on the Open Button – (The orange highlighted button in the pic below)



STEP 3

Locate the file on your hard drive or flash drive and Select the file and click OPEN

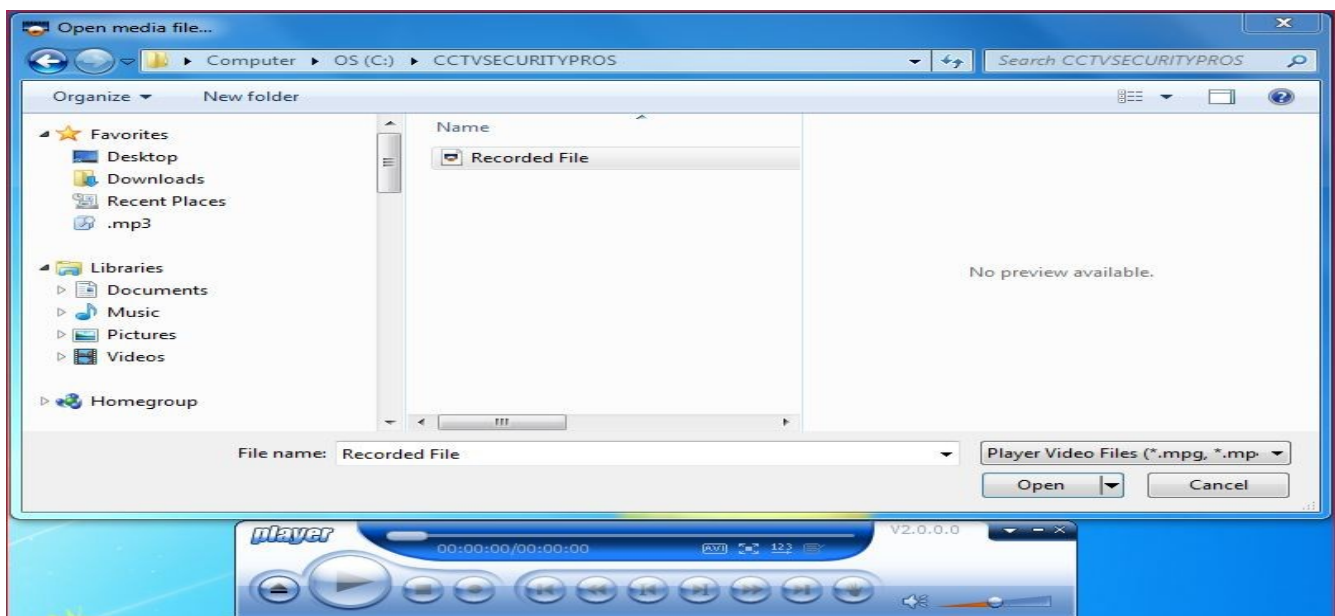

STEP 4

With the file opened, click on the Convert to Avi button, circled in red below.




STEP 5

When the window below appears, click "Convert"

"Source File" is the file you wish to convert.

"Target File" is the name and location of the new file which will now be in the avi format.

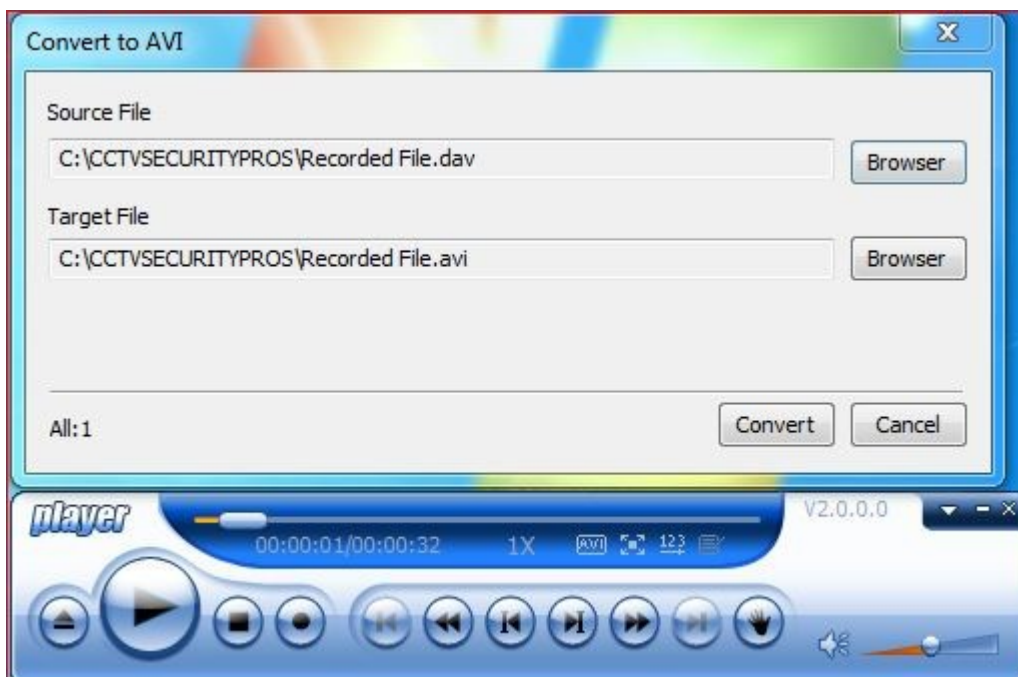

STEP 6

Your new file is ready in the directory you chose.

To play your file, double click it. If you do not have software that will play the file, or have issues opening the file, we recommend using the Divx player available free [here](#).